


GAIA Neo M8 Spacer Installation

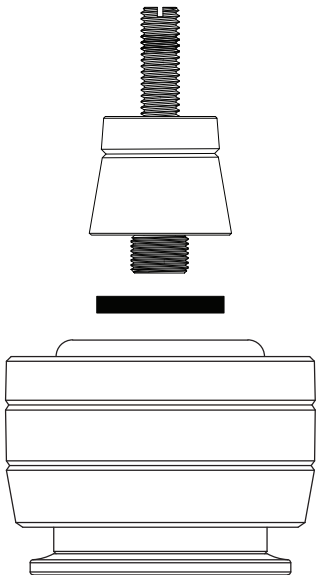

1. Install the long M8 thread adapter into the black M8 spacer.
2. Carefully tilt the speaker and remove the existing spike.
3. Thread the M8 spacer assembly into the bottom of the speaker using the long M8 thread. Tighten until the spacer sits firmly against the bottom of the speaker.
4. Place the included compression washer on top of the GAIA Neo, centering it over the threaded hole.
5. Thread the GAIA Neo isolator onto the bottom of the M8 spacer. Tighten securely so the compression washer is compressed.
6. Rotate the GAIA Neo as needed to align the isolator with the front of the speaker.
7. If available, install the decorative threaded cap from the original speaker spike onto the portion of the thread extending above the outrigger.